

Just relax!
NORDIC SPA & WELLNESS



Manual

installation spabad/swimspa

SWEBAD®




Två faser 400v/230v med nolla, jumpers P13-P74



Två faser 230v utan nolla, jumpers P13-P74



Tre faser 400v/230v med nolla, jumpers P7-P10, P11-P13

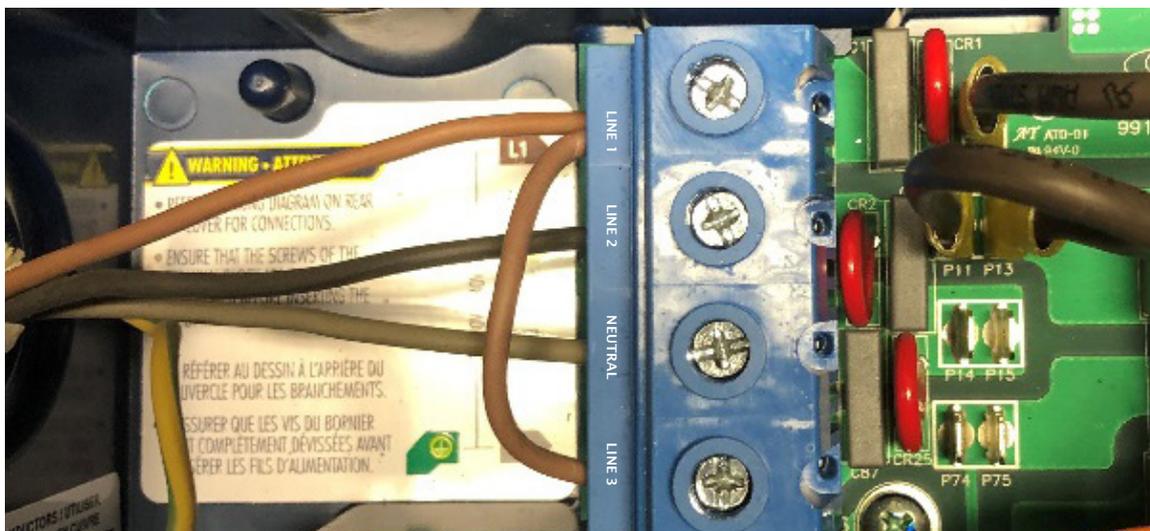

Tre faser 230v utan nolla, jumpers P7-P10, P11-P13

LINE INPUT CONNECTION

# OF PHASE CONNECTED	LINE INPUT CONNECTION	JUMPERS (BROWN WIRES)	
		1	L 1 - N - G
2	L 1 - L 2 - N - G	P13 - P74	
3	L 1 - L 2 - N - L 3 - G	P7 - P10	P11 - P13

Bygling/jumper position samt vilken inkopplingsplint som skall användas (3 fasar vid leverans)

 
4- Select breaker current

Specify the current rating and the number of phases of the RCD used to ensure safe and efficient current management (and no RCD trippings).



Press and hold the **Program** key for 20 seconds until you access the breaker setting menu.

Note: For the **Color keypad series**, select **Settings menu**, go into **Electrical config** and choose Input current.



Current setting for each phase setting

# of phases	Current setting range
1	10 to 48 A
2	10 to 20 A
3	10 to 16 A

Choose the number of phases supplying your spa (1-3). Use the **Up/Down** key to select the desired value. Then press the **Program** key to confirm the selection.



The values displayed by the system correspond to the maximum amperage capacity of the RCD.



Use the **Up/Down** key to select the desired value. Then press the **Program** key to confirm the selection.

Note: If the keypad does not have the **Program** or **Filter** key, use the **Light** key instead.

For more information, see our website: www.geckoalliance.com

Ändra antal fasar i display (3 fasar vid leverans)



SWEBAD[®]

Swebad AB Fridhemsvägen 3, 602 13 Norrköping, Sverige
info@swebad.se hej@swebad.se Tel: 010-204 20 10

swebad.se